











LINEA 2000 B/W entrance panel

342951 - 342961


Description

2 WIRE black and white video pushbutton panel. Wall mounted. Green LED backlit name plate. Camera adjustable by +/- 15° on both axes during installation. One and two-family version available.

Technical data

Power supply from SCS BUS: 18 - 27 Vdc Stand by absorption: 30 mA Max. operating absorption: 270 mA Operating temperature: (-25) - (+70)°C

Dimensional data

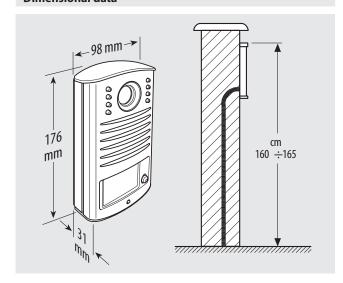

Configuration

The device must be configured (only phisically) as follows:


P - entrance panel number

The configurator in socket P of the speaker module assigns to this a recognition number inside the system.

The numbering of the entrance panels must always start from P=0. The entrance panel configured with P=0 must be a common (or main) entrance panel.

N - call number

Assigns the correspondence between the entrance panel pushbuttons and the audio handsets or video handsets.

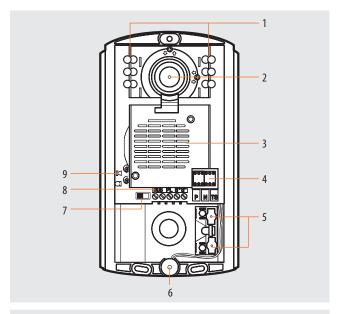

Legend

- 1 IR LED for night lighting of the field of view
- 2 B/W camera with camera slant adjustment horizontally and vertically by $\pm 15^{\circ}$
- 3 Loudspeaker
- 4 Configurator socket
- 5 Call keys
- 6 Microphone
- 7 Door lock release sound enable/disable
- 8 Clamps for BUS connection, door lock and local pushbutton: the module allows to control an electric door lock directly connected to the clamps S+ S- (18 V 4 A impulsive - 250 mA holding current 30 0hm max)
- 9 Microphone and loudspeaker volume adjustment

T – Door lock control time delay

| configurator number | | | | | | | |
|-----------------------|--------|--------|--------|-----------------|--------|--------|---------|
| 0= No configurator | 1 | 2 | 3 | 4* | 5 | 6 | 7 |
| 4 sec. | 1 sec. | 2 sec. | 3 sec. | as pushbutt. | 6 sec. | 8 sec. | 10 sec. |

^{*} Operation as pushbutton for 10 sec. max, after which standby mode is activated. To extend operation time over 10 seconds, use actuator item 346200 configured with

S - type of call signal

The configuration of S determines the call tone of SPRINT handsets. One can thus differentiate the calls from different entrance panels.

| Table for SPR | INT handset o | all signal | | | |
|---------------|---------------|------------|--------|----------|--|
| Configurator | 0 | 1 | 2 | 3 | |
| Type of bell | 2-tone | 2-tone | 2-tone | One-tone | |
| | 1200Hz | 1200Hz | 1200Hz | 1200Hz | |
| | 600Hz | 0 Hz | 2400Hz | | |

For the SWING, PIVOT, POLYX and AXOLUTE handsets, the **S configurator** associates the Entrance panel to the bell programmed in the same apartment. It is possible to chose between 16 different bells. In one-family systems, S=9 configures the general call and the handsets ring, the same as with the S=0.