 
 
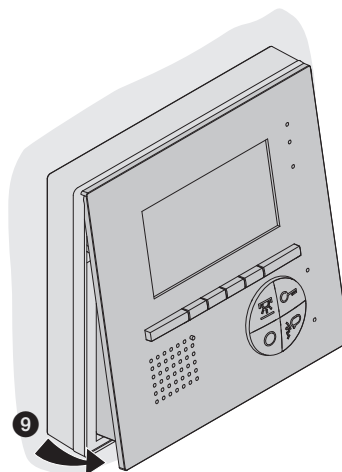 
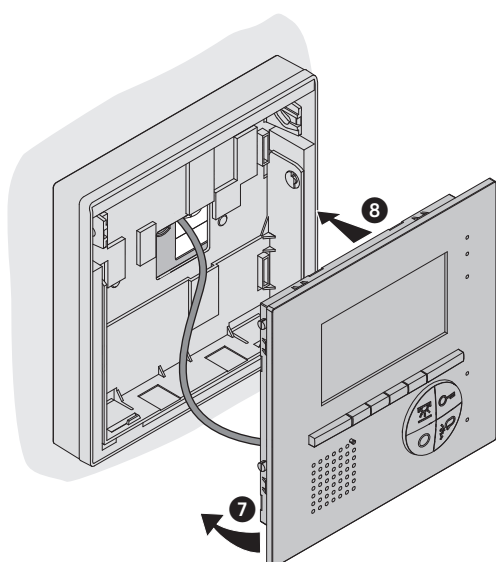 
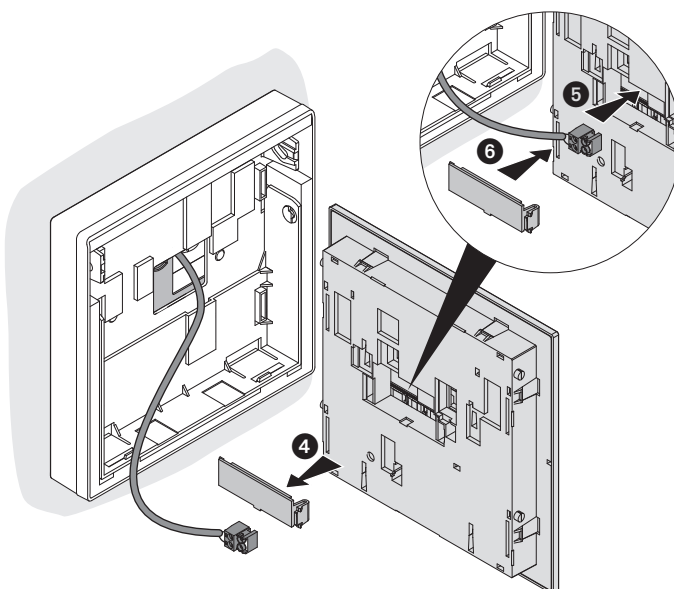 
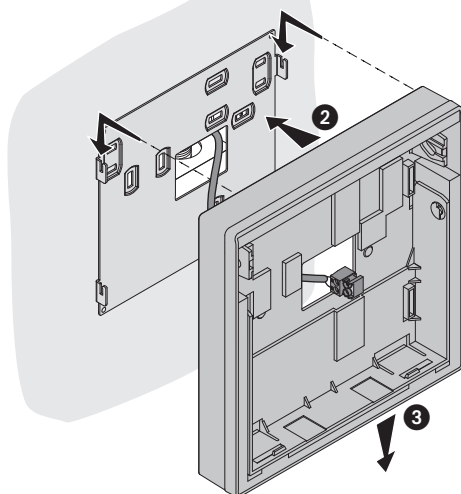 
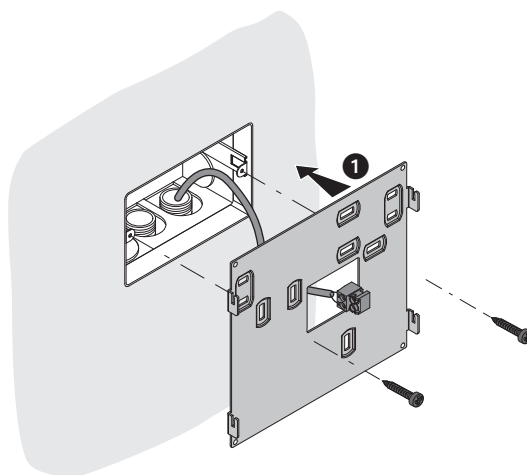 
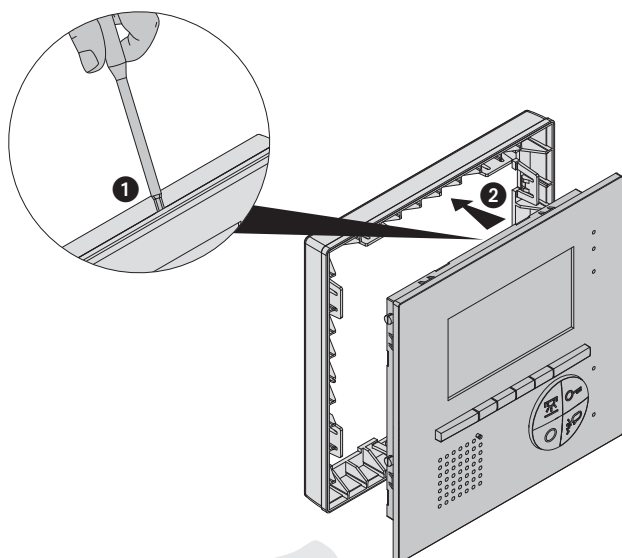 
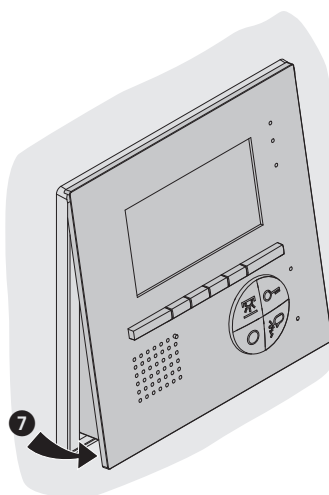 
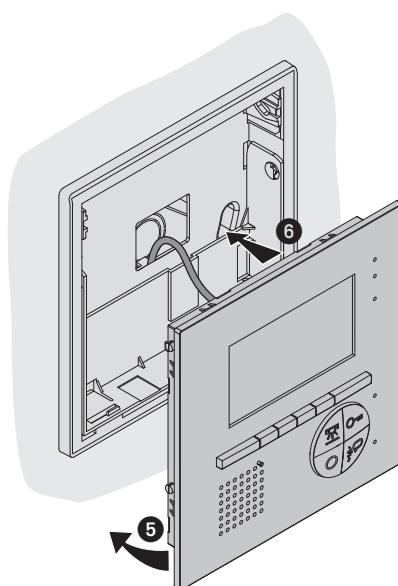 
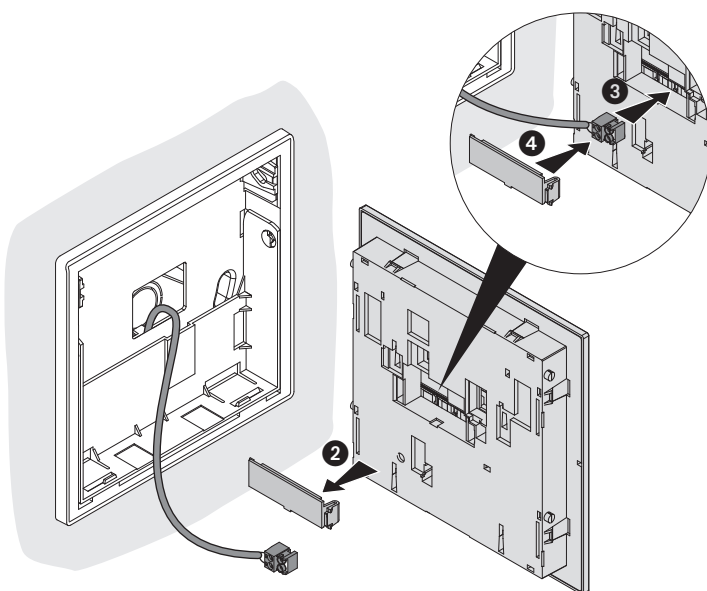 


- Accessorio per inclinazione per installazione a parete 344592
- Kippbares Zubehör für die Wandmontage 344592
- Accessoire d'inclinaison pour installation murale 344592
- Tilting accessory for wall mounted installation 344592
- Accesorio para inclinación para instalación mural 344592
- Inclinatie-accessoire voor wandmontage 344592
- Acessório para inclinação para instalação de parede 344592
- Аксессуар для наклона для настенной установки 344592

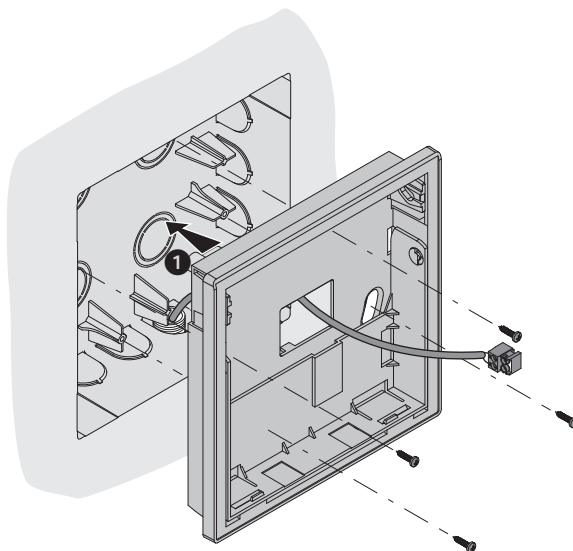


- Accessorio per inclinazione per installazione ad incasso 344562
- Kippbares Zubehör für die UP-Montage 344562
- Accessoire d'inclinaison pour installation encastrée 344562
- Tilting accessory for flush-mounted installation 344562

- Accesorio para inclinación para instalación de empotrar 344562
- Inclinatie-accessoire voor wandinbouw 344562
- Acessório para inclinação para instalação de encaixar 344562
- Аксессуар для наклона для встраиваемой установки 344562

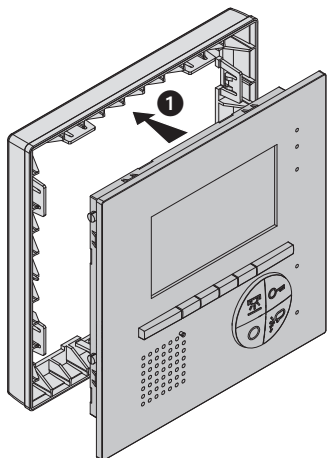


- Smontaggio accessorio per inclinazione per installazione a parete 344592
- Kippbares Zubehör für die Wandmontage 344592 abmontieren
- Démontage de l'accessoire d'inclinaison pour installation murale 344592
- Disassembly tilting accessory for wall mounted installation 344592

- Desmontaje accesorio para inclinación para instalación mural 344592
- Demontage inclinatie-accessoire voor wandmontage 344592
- Desmontagem do acessório para inclinação para instalação de parede 344592
- Демонтаж аксессуара для наклона для настенной установки 344592

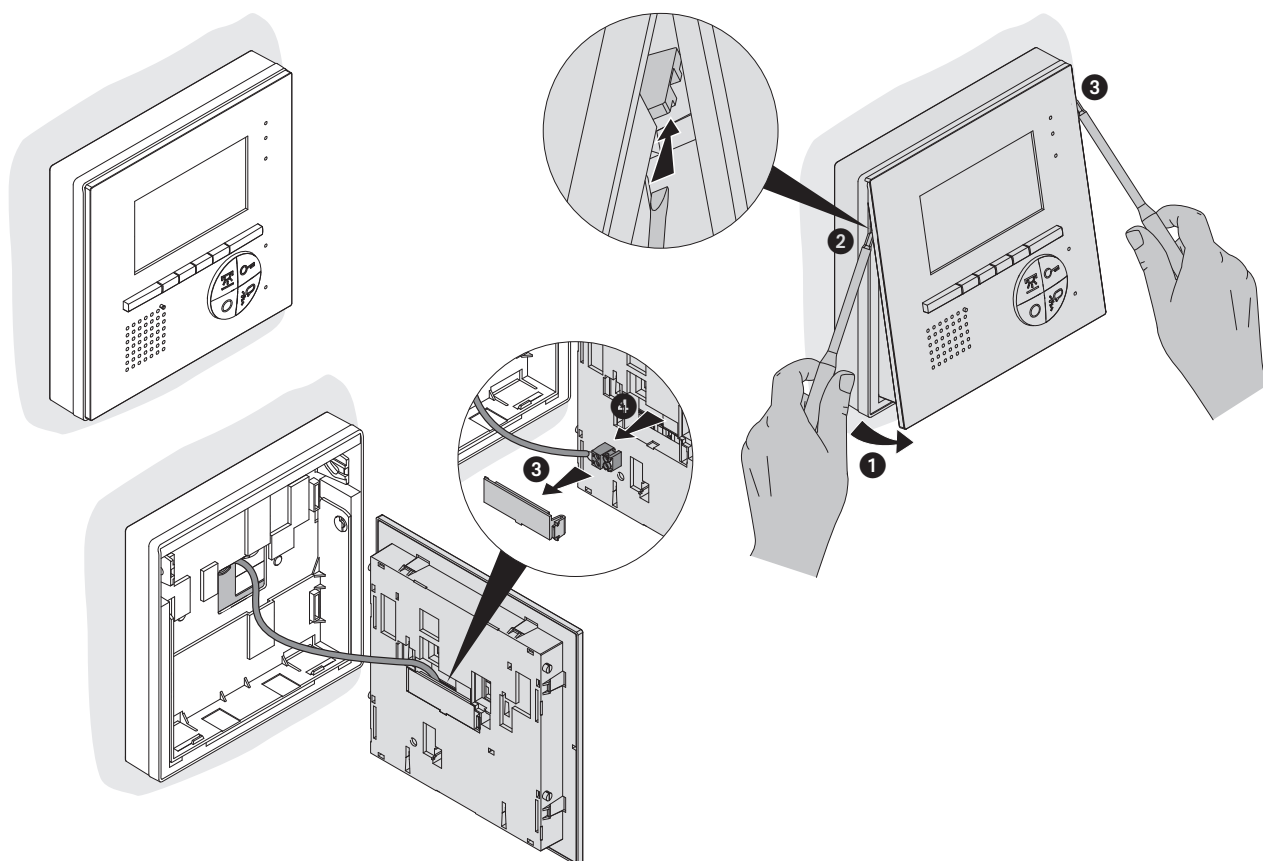






- Smontaggio accessorio per inclinazione per installazione ad incasso 344562
- Kippbares Zubehör für die UP-Montage 344562 abmontieren
- Démontage de l'accessoire d'inclinaison pour installation encastrée 344562
- Disassembly tilting accessory for flush-mounted installation 344562

- Desmontaje accesorio para inclinación para instalación de empotrar 344562
- Demontage inclinatie-accessoire voor wandinbouw 344562
- Desmontagem do acessório para inclinação para instalação de encaixar 344562
- Демонтаж аксессуара для наклона для встраиваемой установки 344562







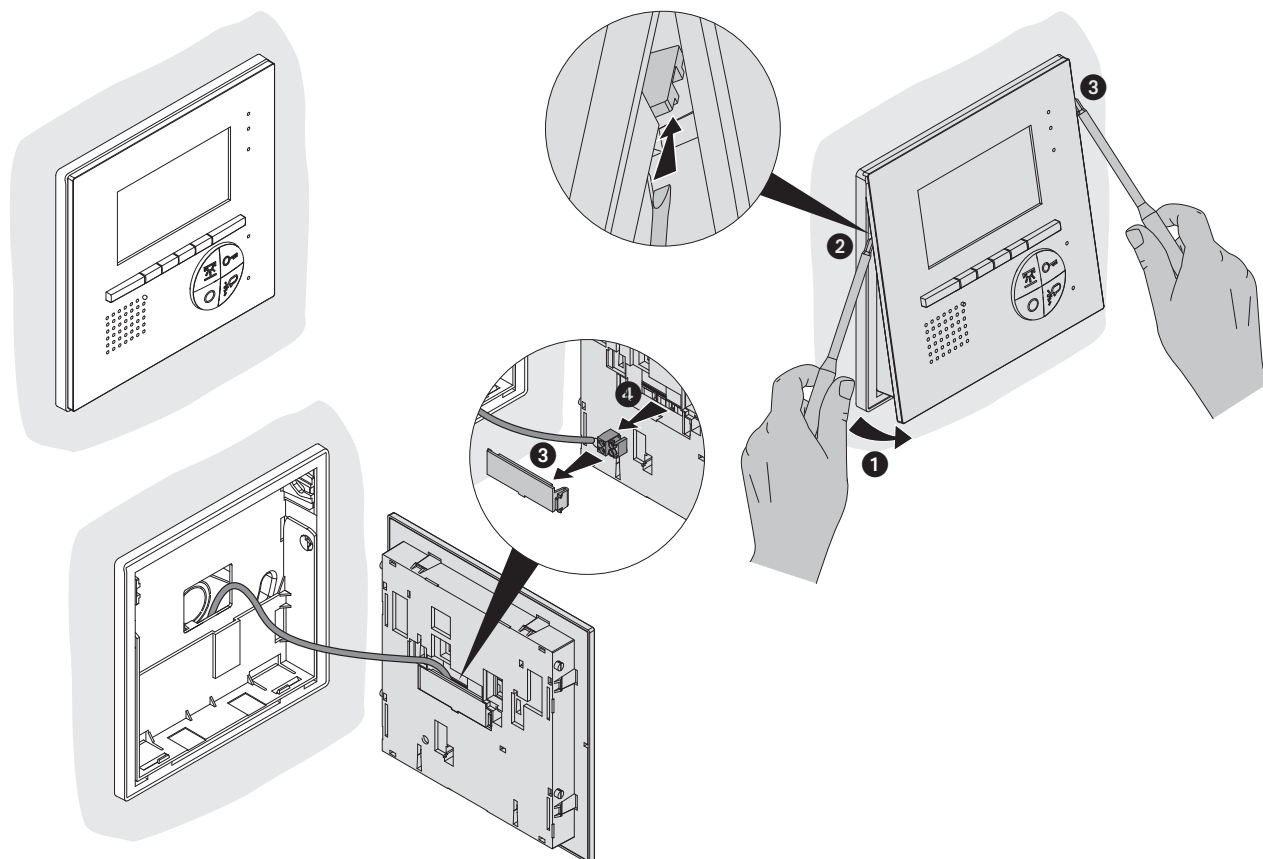


- Accessorio per montaggio ad incasso 344572
- Zubehör für die UP-Montage 344572
- Accessoire de montage encastré 344572
- Accessory for flush mounting installation 344572

- Accesorio para montaje de empotrar 344572
- Accessoire voor wandinbouw 344572
- Acessório para montagem de encaixar 344572
- Аксессуар для встраиваемой установки 344572

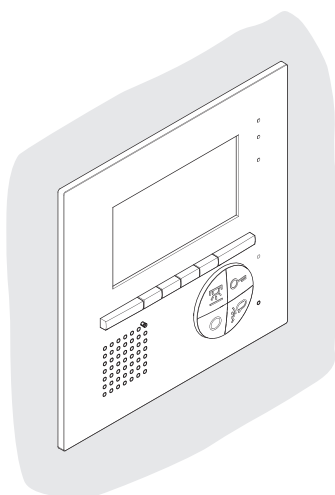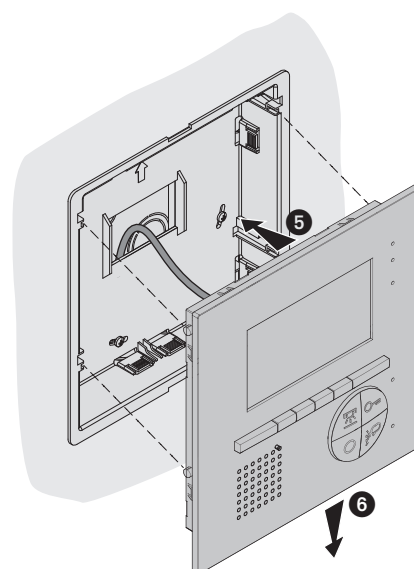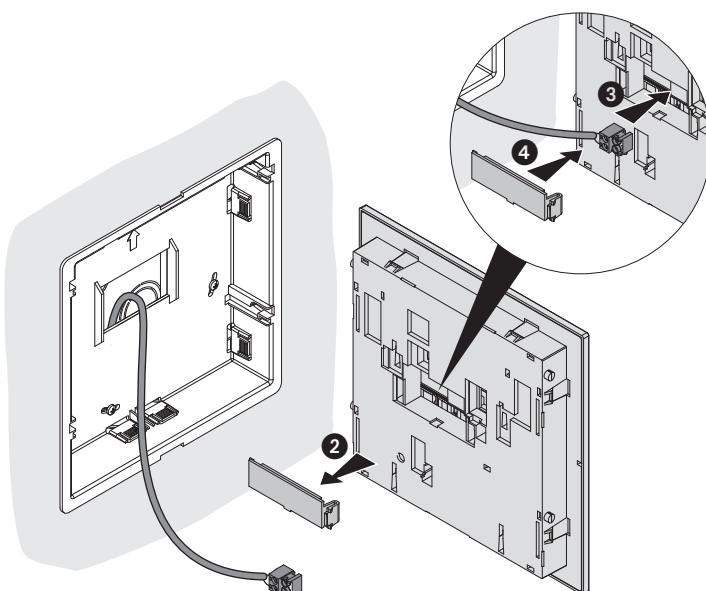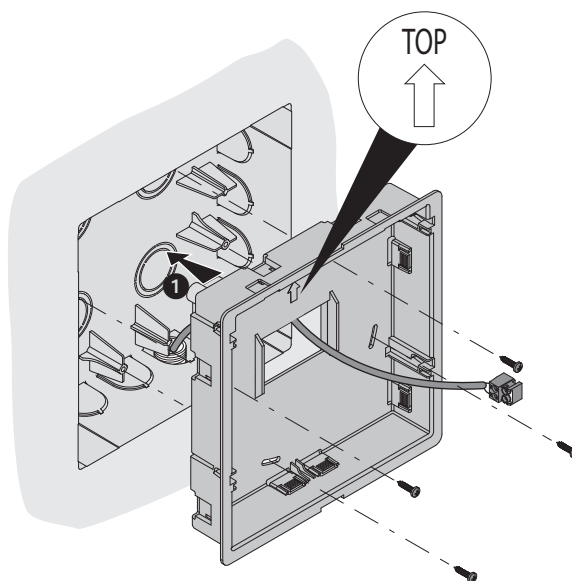
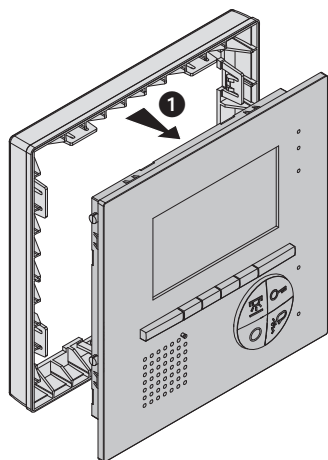


- Accessorio cornetta 344582
- Zubehör Hörer 344582
- Accessoire combiné 344582
- Handset accessory 344582
- Accesorio auricular 344582
- Accessoire hoorn 344582
- Acessório receptor 344582
- Аксессуар телефонной трубки 344582

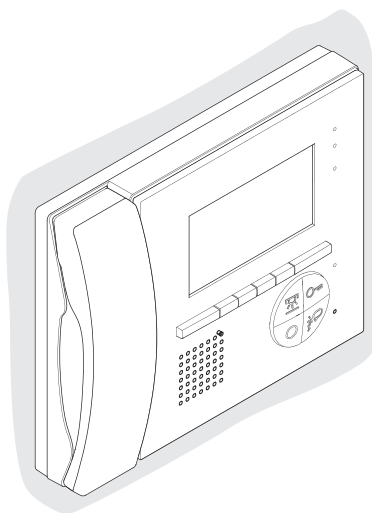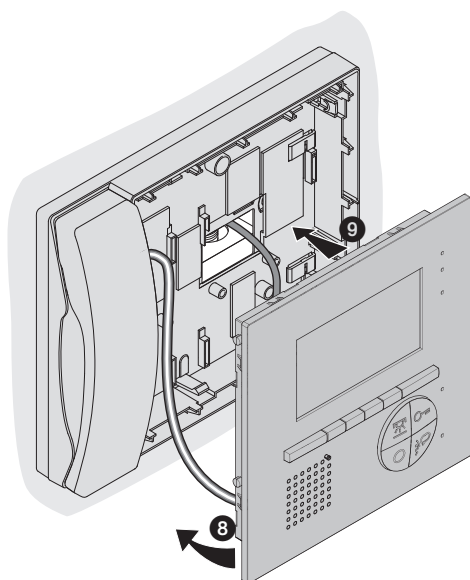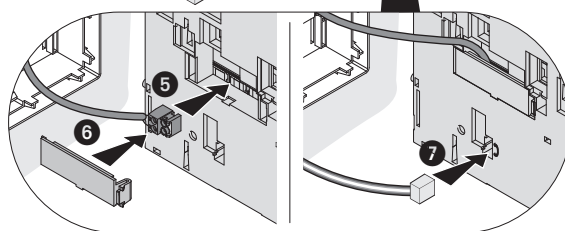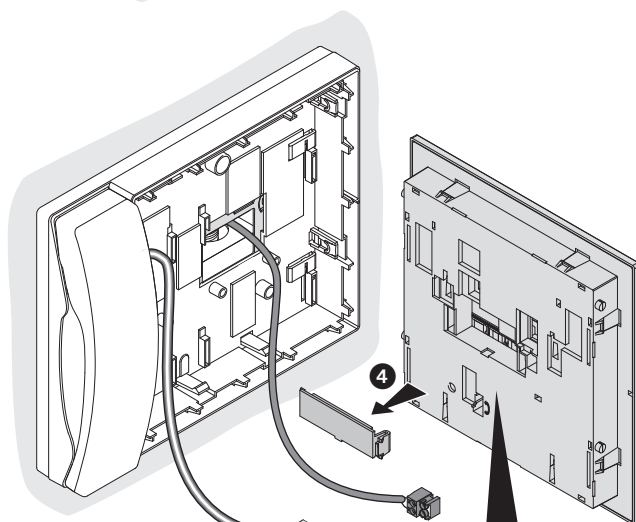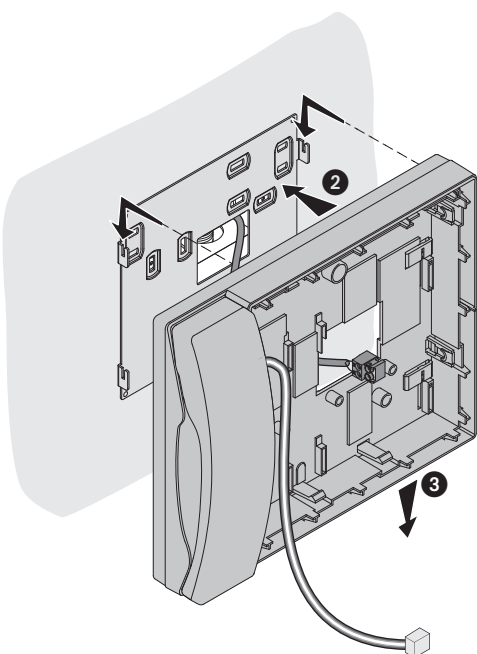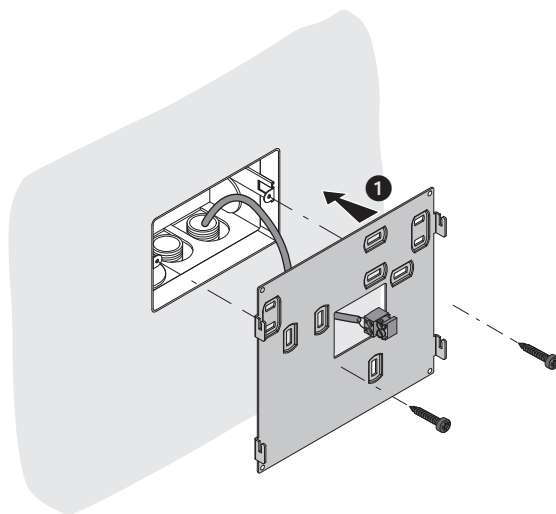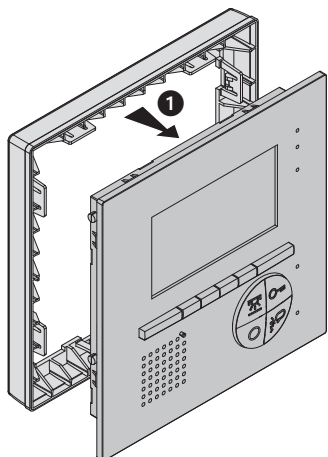


A – Punti di aggancio alla staffa per installazione a parete
A – Befestigungsstellen am Bügel für die Wandmontage
A – Points de fixation à la bride pour installation murale
A – Hooking points to the bracket for wall mounted installation
A – Puntos de enganche en el soporte para instalación mural
A – Haakpunten aan beugel voor wandinstallatie
A – Pontos de fixação ao suporte para instalação de parede
A – Места крепления к кронштейну для настенной установки

B – Punti di aggancio per installazione su base da tavolo
B – Befestigungsstellen am Bügel für die Montage als Tischgerät
B – Points de fixation pour installation sur base de table
B – Hooking points for installation on table-top base
B – Puntos de enganche para instalación en base de sobremesa
B – Haakpunten voor de installatie als tafelmanier
B – Pontos de fixação para instalação sobre base de mesa
B – Места крепления для установки на настольном основании

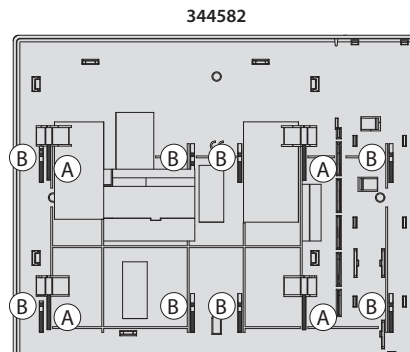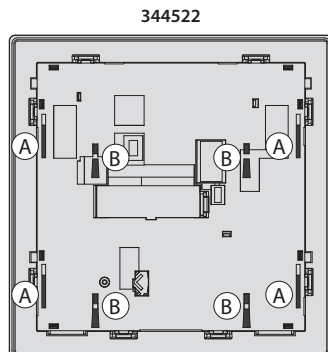


- Base da tavolo 344552
- Tischhalterung 344552
- Base de table 344552
- Table-top base 344552

- Base de sobremesa 344552
- Tafelonderstel 344552
- Base de mesa 344552
- Настольное основание 344552

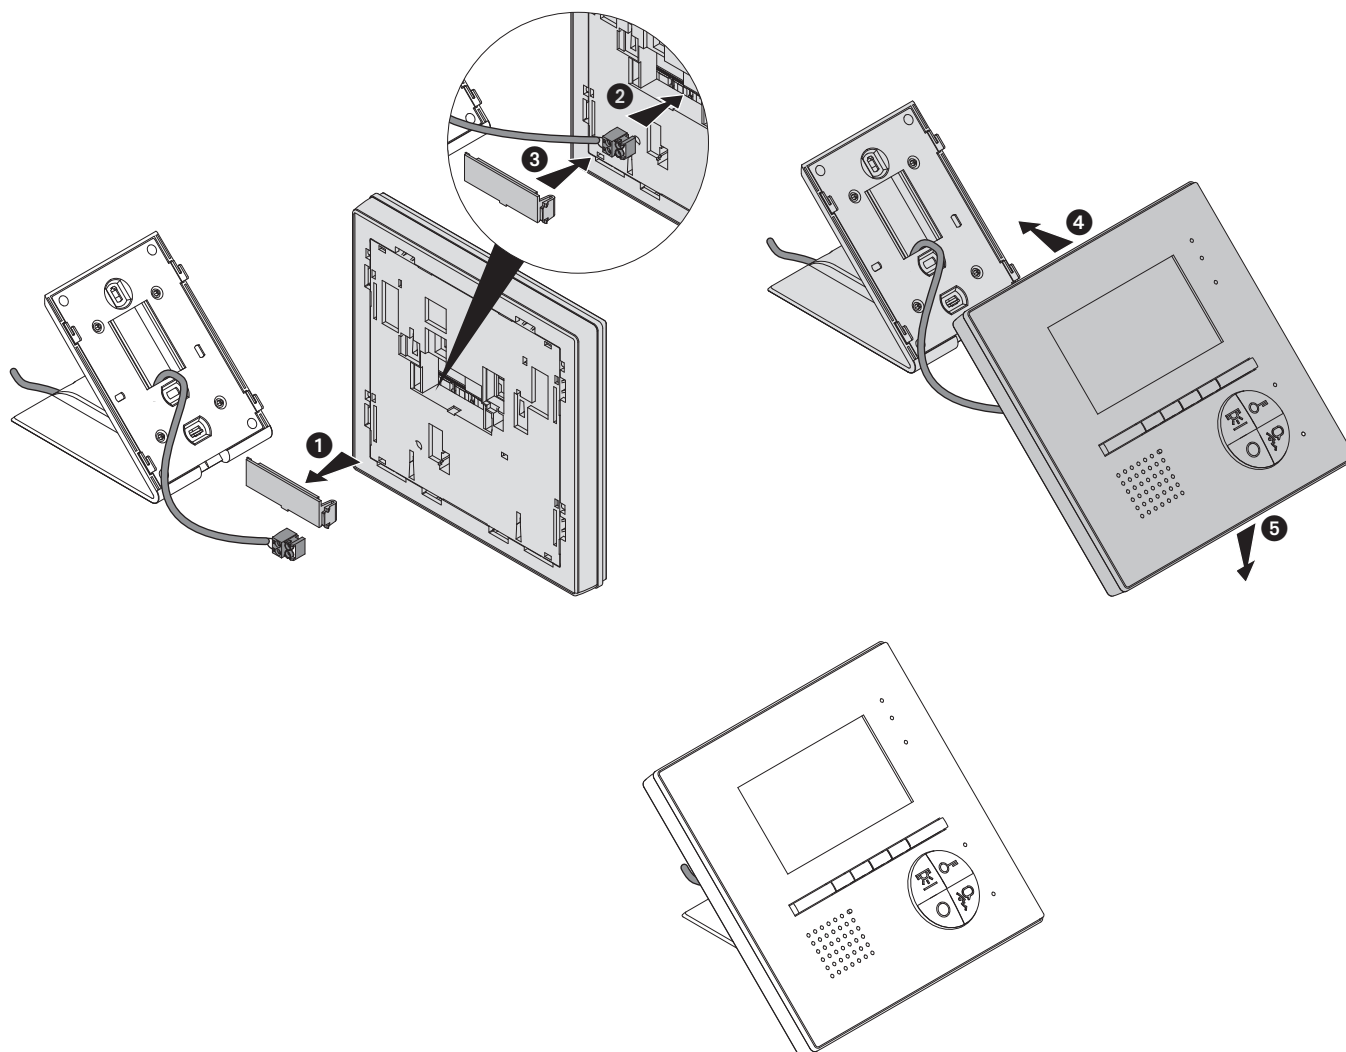

- Accessorio cornetta 344582 e due basi da tavolo 344552
- Zubehör Hörer 344582 und zwei Tischhalterungen 344552
- Accessoire combiné 344582 et deux bases de table 344552
- Handset accessory 344582 and two table-top bases 344552

- Accesorio auricular 344582 y dos bases de sobremesa 344552
- Accessoire hoorn 344582 en twee tafellonderstellen 344552
- Acessório receptor 344582 e duas bases de mesa 344552
- Аксессуар телефонной трубки 344582 и два настольных основания 344552

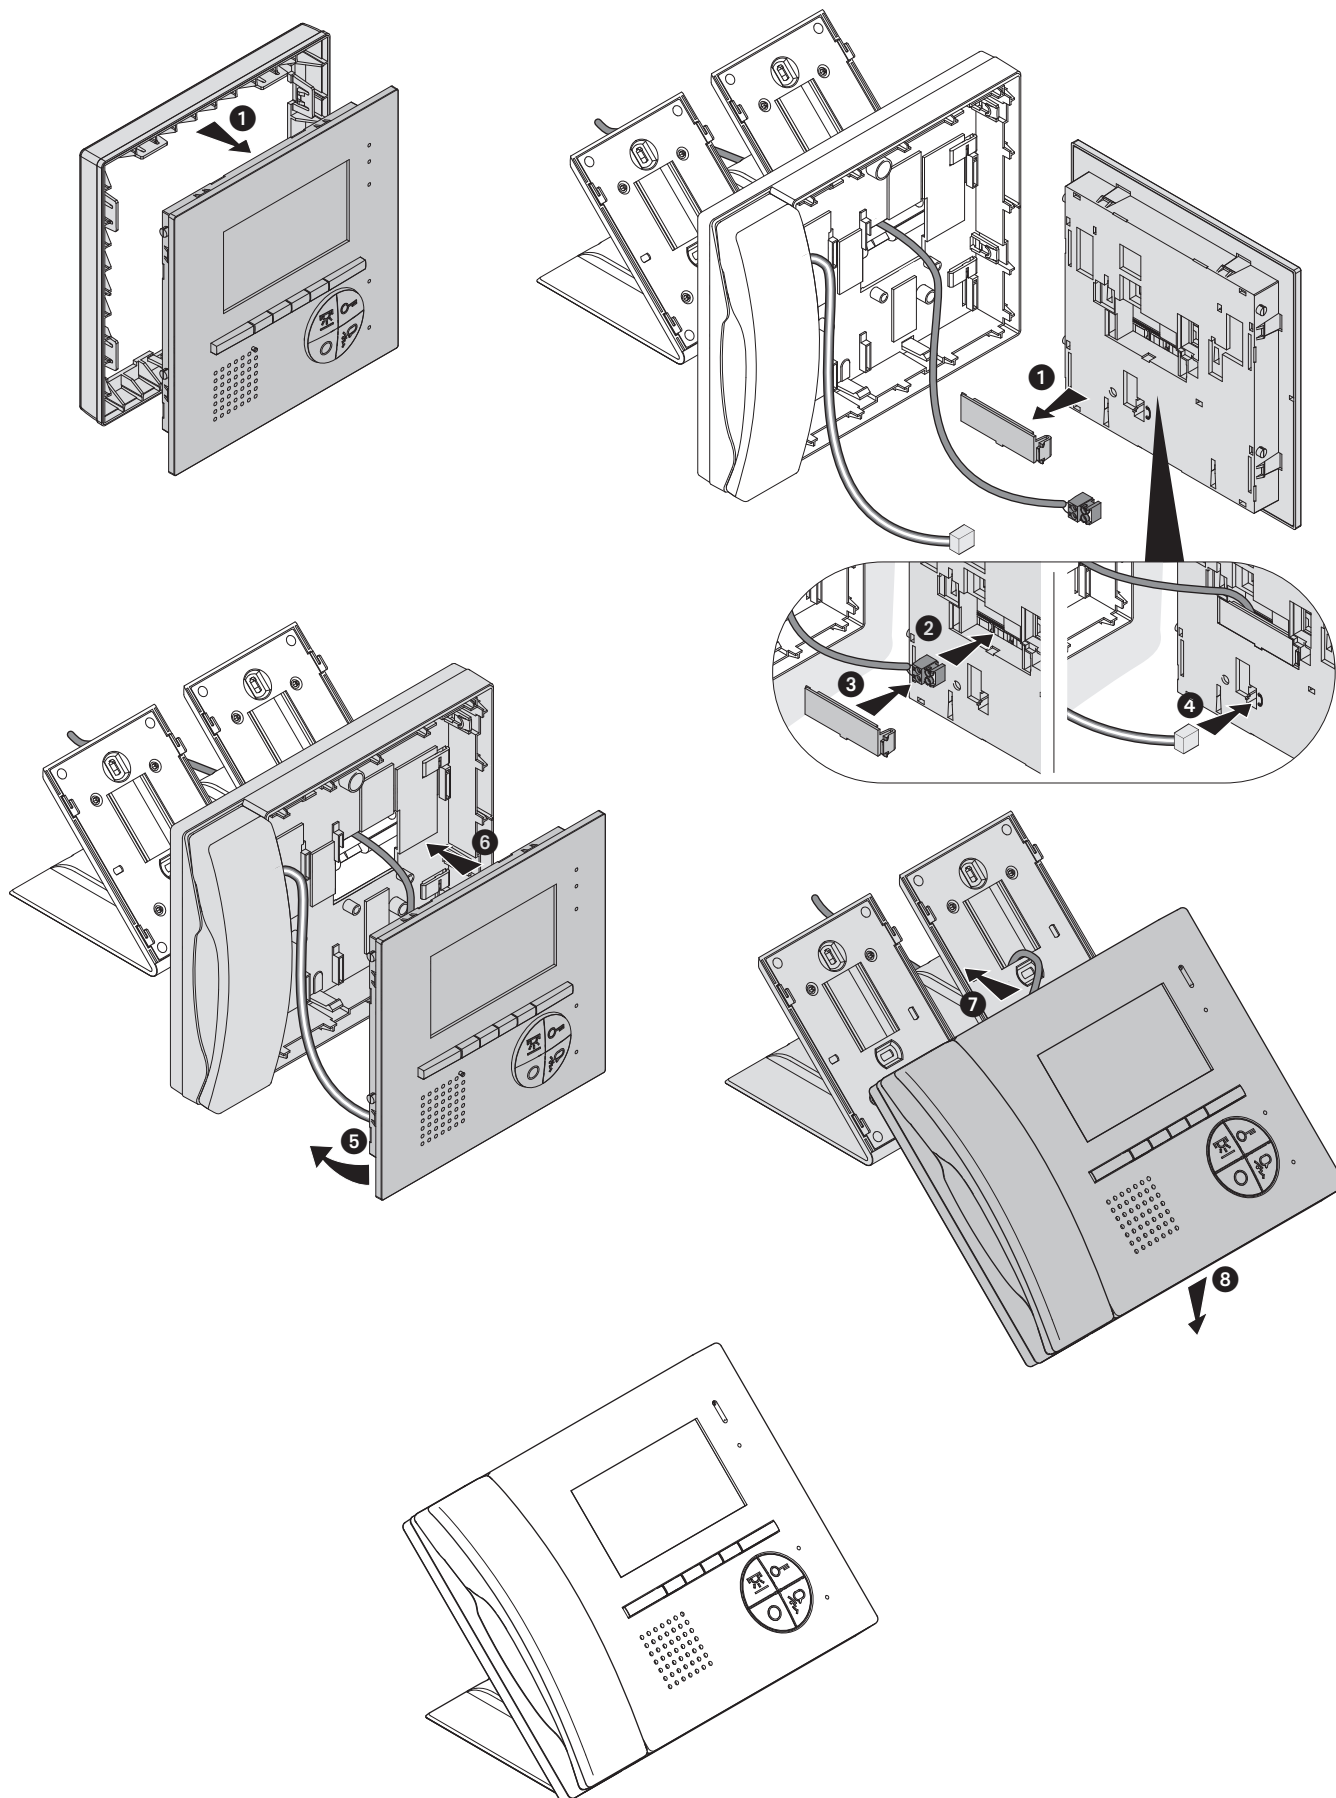

- Smontaggio accessorio cornetta 344582
- Zubehör Hörer 344582 abmontieren
- Démontage accessoire combiné 344582
- 344582 handset accessory removal

- Desmontaje accesorio auricular 344582
- Démontage accessoire hoorn 344582
- Desmontagem do acessório auscultador 344582
- Демонтаж аксессуара трубка 344582

